




www.timkid.de

timkid GmbH | Mühlendeich 15 | 19303 Dömitz | 03875836933 | info@timkid.de



ASSEMBLY INSTRUCTIONS CLE XO

ALL PARTS FOR THE ASSEMBLY OF CLEXO

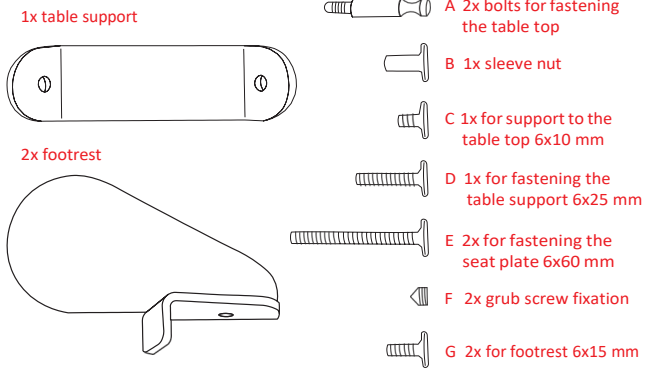

ASSEMBLY INSTRUCTIONS

Insertion of the back leg.
Fixation with cross bolt nut
(is already present in the leg)

IMPORTANT! The nut must point inwards, the slot must be vertical.

