

## WASTE RECEPTACLES AND BINS

### **BINS**



PP1303C/PP1305C/PP1312C/ PP1321C Bright finish

PP1303CS/PP1305CS/PP1312CS/ PP1321CS Satin finish



PP1305B Black negro

# White finish General description

PP1303/PP1305/PP1312/

PP1321

- Indoor circular body waste bins, 3L (PP1303),.
   5L(PP1305),.12L (PP1312).or 20L (PP1321)..
   capacity,operated by means of a pedal, to rest directly on the floor.
- Suitable for washrooms and in-doors public areas.
   Modelssuitable for public use.
- Strong plastic inner bucket easy to clean and to removethe bin liner.
- Smooth and silent closing lid that avoids bad odors.
- · Sturdy carrying handle easy to move the bin.

#### Components and materials


- PP1321/ PP1312/ PP1305/ PP1303: steel white Epoxyfinish.
- PP1321C/ PP1312C/ PP1305C/ PP1303C: AISI 410stainless steel, bright finish.
- PP1321CS/ PP1312CS/ PP1305CS: PP1303CS: 410stainless steel, satin finish.PP1305B: steel black Epoxy finish.
- BODY: circular. Robust against shocks and misuse.
- LID: circular. Silent and anti-odors. Lid opening based onhinge system made of thermoplastic material.
- BASE: made of black thermoplastic, non-slip, insulates thecube bottom of moisture and makes the cube remain stablein place.
- INNER BUCKET: made of polypropylene with metalhandle, for easy removal and capacity of 3 L (PP1303 ...),5 L (PP1305 ...), 12 L (PP1312) or 20 L (PP1321).
- PEDAL: metallic with a piece of non-slip black thermoplastic attached on its top. Activates the opening of the lidby pressing.
- HANDLE: metallic and located in the upper rear part of thebin to facilitate the transport.


#### **Technical specifications**

Capacity	3 L (PP1303) 5 L (PP1305) 12 L (PP1312)			
	20 L (PP1321)			
Weight (net)	 (Kg)	C (Kg)	CS (Kg)	
PP1303	0,63	0,56	0,56	
PP1305	0,84	0,75	0,75	
PP1312	1,62	1,45	1,45	
PP1321	2,00	1,80	1,80	

#### Dimensions



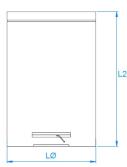

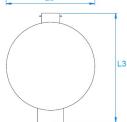

	LØ (mm)	L1 (mm)	L2 (mm)	L3 (mm)
PP1303	168	226	250	226
PP1305	205	264	275	264
PP1312	249	320	392	320
PP1321	290	362	450	362

Dimensiones: ± 4%

# Operation

Push with the foot the pedal to operate the lid opening.

