

# **WASTE BINS AND OTHER CONTAINERS**

## **FEMENINE HYGIENE CONTAINER**

### Attached with double lid



PPA4010 White epoxy finish



PPA4010CS Satin Finish



PPA4010B
White epoxy black

#### General description:

- Manual-operated feminine hygiene container with a capacity of 10 liters, manufactured in steel and AISI 304 stainless steel, with a thickness of 0.8 mm.
- Removable container head with handle and integrated waste collection reservoir for discreet disposal of hygiene items. Specifically designed to prevent content visibility.
- The head incorporates a double lid system that conceals the container's content when the handle is lifted.
- Also suitable for disposing of used diapers.
- Highly resistant and hygienic. Easy to clean and maintain.
- Robust and anti-vandal, this container is suitable for highfrequency use washrooms. Models suitable for communal facilities.
- It could be directly supported on the floor or to the wall.
- Available in a variety of colors. Please contact us for more information.

#### **Components and Materials**

- PPA4010: made of 0.8 mm thick steel, white epoxy painted finish.
- PPA4010B: made of 0.8 mm thick steel, black epoxy painted finish.
- PPA4010CS: made of AISI 304 stainless steel, 0.8 mm thick, satin finish.


**BODY:** Single-piece body, 0.8 mm thick, joined at the back by welding.

- BASE: 0.8 mm thick, welded to the body.
- HEAD: Made of steel and AISI 304 stainless steel, 0.8 mm thick.
   Incorporates a double lid system that conceals the container's content when the handle is lifted.
- LID: Made of steel and AISI 304 stainless steel, 0.8 mm thick, with handle (handle) also made of stainless steel.

#### **Technical specifications**

Dimensions	382x280x141
Capacity	10 L
BodyThickness	0.8 mm
Weight (empty)	3.030 g

#### **Dimensions:**

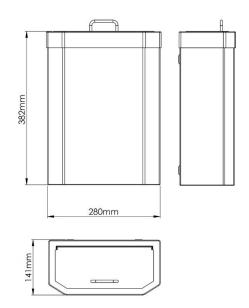

Dimensions: ±4%

## Operation

Place the garbage bag around the plastic ring. To facilitate the placement of the bag, the plastic ring pivots. With the bag placed in the ring, position it horizontally and secure it on the body's tabs.

